

廠牌：Bose

產品型號、序號：詳參下表。

低音箱標籤上的 產品名稱	商品貨號	產品序號第 8 到 11 位所 列之日期號碼
ACOUSTIMASS® 5 系列 IV 電源揚 聲器系統	23943, 23944, 23945, 23946, 23947, 23948, 23949, 23950, 23951, 23952, 25245, 25246, 25247, 25248, 25967, 25968, 25969, 25970, 25971, 25972, 25973, 25974, 26430, 26431, 26766, 26767, 29819, 29820, 33317, 33318, 24850, 24851, 24858, 24859, 251168-13, 251168-23, 251168-63	全部
ACOUSTIMASS® 6 III 家庭娛樂系 統（僅日期號碼 在 2090 至 6091 之 間）	264830-1119, 264830-2123, 264830- 212R, 264830-2223, 264830-222R, 264830-2323, 264830-232R, 264830- 4123, 264830-412R, 264830-4223, 264830-422R, 264830-4323, 264830- 432R, 29275, 29277, 29278, 29279, 29280, 31590, 31597, 31598, 31599, 31600, 330374-1100, 33834, 346838- 1100, 346838-1110, 346838-1120, 346838-1130, 346839-1100, 346839- 1110, 346839-1120, 346839-1700, 346839-1710, 346839-1720, 34971, 35157, 352569-2100, 352569-210R, 352569-2200, 352569-220R, 352569- 4100, 352569-410R, 352569-4200, 352569-420R, 353198-0010, 35359, 35360, 35361, 355381-2120, 355381- 2220, 355381-2320, 355381-4120, 355381-4220, 355381-4320, 360727- 2100, 360731-2100, 361655-1110, 361655-1120, 629824-2100, 629825- 2100, 264831-1139, 264831-2119, 264831-213S, 264831-2219, 264831- 223S, 31133	僅日期號碼在 2090 至 6091 之間
ACOUSTIMASS® 10 III 家庭娛樂系 統	264880-1119, 29283, 29284, 29285, 29286, 29287, 29288, 31591, 31592, 31601, 31602, 31603, 31604, 33571, 34972, 35158, 35362, 35373, 264881- 1139, 264881-1239, 31134, 31135	全部
ACOUSTIMASS® 15 家庭影院揚聲 器系統	21363, 21364, 21365, 21366, 21367, 21368, 21369, 21370, 21371, 21372, 22857, 22858, 23423, 23424, 23425, 23426, 30017, 36697, 37483, 37484	全部
ACOUSTIMASS® 15 II 家庭娛樂系 統（僅日期號碼 在 2090 至 6091 之 間）	264910-1119, 29291, 29292, 29293, 29294, 29295, 29296, 31593, 31594, 31605, 31606, 31607, 31608, 33573, 34983, 35159, 35374, 35375, 193854- 001, 193854-002, 193854-131C, 23206, 23207, 264911-1139, 264911-1239, 31136, 31137, 356439-211S, 356439- 221S	僅日期號碼在 2090 至 6091 之間
ACOUSTIMASS® 16 家庭娛樂系統	264910-1129, 29659, 29660, 31595, 31596, 33574, 39098, 264911-1149, 264911-1249, 31138, 31139	全部

ACOUSTIMASS® 20 電源揚聲器系 統	10052, 10053, 10054, 10055, 10056, 10057, 10058, 10059, 10063, 10064, 17996, 17997, 18803, 18804, 18850, 18851, 18938, 20184, 20185, 21157, 21158, 21159, 21160, 21161, 21162, 21235, 21236, 21237, 21238, 22725, 22726, 22727, 22728, 22729, 22730, 22731, 22732, 22733, 22734, 22735, 22736, 23417, 23418, 23419, 23420, 24334, 24335, 25049, 25050, 25051, 25052, 25053, 25054, 25055, 25056, 25235, 25236, 25961, 25962, 25963, 25964, 25965, 25966, 26432, 26433, 26753, 26754, 26863, 26864, 26888, 26889, 26890, 26891, 26892, 26893, 26894, 27140, 27141, 27142, 27143, 27152, 27153, 27154, 27155, 30019, 30020, 33019, 33319, 33320, 178715- 1119, 178715-1219, 178715-2219, 178715-6119, 178715-6219, 181363-13, 181363-23, 181363-63, 197983-1119, 22905, 22906, 23575, 23576	全部
COMPANION™ CS-6 電源揚聲器 系統	11105, 11106, 17190, 17209, 17210, 19042, 20459	全部
LIFESTYLE® 5 系 列 II 電源揚聲器 系統	11069, 15130, 15883, 15884, 15885, 15886, 19153, 19154, 9484, 9485, 9486, 9487, 9488, 9489, 9490, 9491, 9492, 9493, 11070, 11452, 11453, 11454, 11456, 11457, 11483, 11484, 11485, 11486, 172273-1119, 172273-1219, 172273-6219, 172274-13, 172274-23, 172274-63, 18805, 18806, 19595, 349185-0010, 9474, 9475, 9476, 9477, 9478, 9479, 9480, 9481, 9482, 9483, 9498, 9503	全部
LIFESTYLE® 8 電 源揚聲器系統	19560, 19562, 19563, 19564, 19565, 19566, 19567, 19568, 19569, 19570, 19571, 20960, 20961, 20962, 21670, 21671, 22859, 22860, 189879-131C, 20406, 20407, 20408, 20658, 20659, 20660, 21436, 21437	全部
LIFESTYLE® 12 電源揚聲器系統	10050, 10051, 10174, 10627, 10628, 10629, 10630, 10676, 10677, 11114, 11115, 24273, 8782, 8783, 8784, 8786, 8960, 9249, 9250, 9251, 9253, 10229, 11079, 11489, 11490, 11491, 11492, 175552-23, 175552-33, 18408, 18409, 18410, 18411, 18418, 18419, 187694- 131C, 187694-231C, 187694-631C, 187696-1119, 187696-1219, 187696- 2119, 187696-6119, 187696-6219, 191170-131C, 191170-231C, 191170- 631C, 197284-001, 21423, 21424, 251714-001, 252184-001, 252184-006,	全部

	253284-006, 253859-001, 253859-002, 253859-006, 9527, 9930	
LIFESTYLE® 20 電源揚聲器系統	10052, 10053, 10054, 10055, 10056, 10057, 10058, 10059, 10063, 10064, 17996, 17997, 18803, 18804, 18850, 18851, 18938, 25049, 25050, 25051, 25052, 25053, 25054, 25055, 25056, 27140, 27141, 27142, 27143, 178715-1119, 178715-1219, 178715-2219, 178715-6119, 178715-6219, 181363-13, 181363-23, 181363-63, 197983-1119, 22905, 22906, 23575, 23576	全部
LIFESTYLE® 25 電源揚聲器系統	17450, 17451, 17452, 17453, 17456, 17457, 17458, 17459, 17460, 17461, 18955, 18956, 18957, 18958, 18959, 18960, 18963, 18964, 22940, 18408, 18409, 18410, 18411, 18418, 18419, 187694-131C, 187694-231C, 187694-631C, 187696-1119, 187696-1219, 187696-2119, 187696-6119, 187696-6219, 191170-131C, 191170-231C, 191170-631C, 197284-001, 21423, 21424, 251714-001, 252184-001, 252184-006, 253284-006, 253859-001, 253859-002, 253859-006	全部
LIFESTYLE® 30 電源揚聲器系統	20453, 20454, 20456, 20457, 20546, 20547, 20964, 20965, 21239, 21240, 21241, 21242, 21351, 21352, 23189, 23413, 23414, 23415, 23416, 193134-131C, 193134-2313, 193134-231C, 193134-631C, 20542, 20543, 21532, 21533	全部
LIFESTYLE® 50 電源揚聲器系統	22737, 22738, 22739, 22740, 22741, 22742, 22743, 22744, 22745, 22746, 22747, 22748, 24336, 24337, 25237, 25238, 26755, 26756, 26895, 26896, 26897, 26898, 26899, 26900, 26901, 26902, 27156, 27157, 27159	全部
POWERED ACOUSTIMASS® 5 系列 III 揚聲器 系統	11069, 15130, 15883, 15884, 15885, 15886, 19153, 19154, 9484, 9485, 9486, 9487, 9488, 9489, 9490, 9491, 9492, 9493, 11070, 11452, 11453, 11454, 11456, 11457, 11483, 11484, 11485, 11486, 172273-1119, 172273-1219, 172273-6219, 172274-13, 172274-23, 172274-63, 18805, 18806, 19595, 349185-0010, 9474, 9475, 9476, 9477, 9478, 9479, 9480, 9481, 9482, 9483, 9498, 9503	全部
POWERED ACOUSTIMASS® 5 系列 IV 揚聲器 系統	23933, 23934, 23935, 23936, 23937, 23938, 23939, 23940, 23941, 23942, 23943, 23944, 23945, 23946, 23947, 23948, 23949, 23950, 23951, 23952, 25219, 25220, 25221, 25222, 25245, 25246, 25247, 25248, 25967, 25968, 25969, 25970, 25971, 25972, 25973, 25974, 26126, 26127, 26430, 26431, 26766, 26767, 29819, 29820, 33317,	全部

	33318, 24850, 24851, 24858, 24859, 251168-13, 251168-23, 251168-63	
POWERED ACOUSTIMASS® 8 揚聲器系統	19560, 19562, 19563, 19564, 19565, 19566, 19567, 19568, 19569, 19570, 19571, 20960, 20961, 20962, 21670, 21671, 22859, 22860, 189879-131C, 20406, 20407, 20408, 20658, 20659, 20660, 21436, 21437	全部
POWERED ACOUSTIMASS® 8 系列 II 揚聲器系統	24465, 24466, 24467, 24468, 24469, 24470, 24471, 24472, 24473, 24474, 24475, 24476, 26783, 26784, 27035, 27036, 27697, 27698, 31365, 252879-2109, 252879-6109, 252879-6209, 263062, 26807, 26808	全部
POWERED ACOUSTIMASS® 9 揚聲器系統	10050, 10051, 10174, 10416, 10627, 10628, 10629, 10630, 10676, 10677, 11114, 11115, 11259, 11260, 11261, 11262, 11263, 11264, 11265, 11266, 11267, 11268, 11269, 11270, 16865, 16866, 16867, 16868, 16869, 16870, 19097, 19098, 20538, 20539, 20540, 20541, 20956, 20957, 20958, 20959, 24273, 25257, 25258, 8782, 8783, 8784, 8786, 8799, 8960, 9249, 9250, 9251, 9253, 9254, 10229, 11079, 11489, 11490, 11491, 11492, 175552-23, 175552-33, 9527, 9930	全部
POWERED ACOUSTIMASS® 20 揚聲器系統	10052, 10053, 10054, 10055, 10056, 10057, 10058, 10059, 10063, 10064, 17996, 17997, 18803, 18804, 18850, 18851, 18938, 20184, 20185, 21157, 21158, 21159, 21160, 21161, 21162, 21235, 21236, 21237, 21238, 22725, 22726, 22727, 22728, 22729, 22730, 22731, 22732, 22733, 22734, 22735, 22736, 23417, 23418, 23419, 23420, 24334, 24335, 25049, 25050, 25051, 25052, 25053, 25054, 25055, 25056, 25235, 25236, 25961, 25962, 25963, 25964, 25965, 25966, 26432, 26433, 26753, 26754, 26863, 26864, 26888, 26889, 26890, 26891, 26892, 26893, 26894, 27140, 27141, 27142, 27143, 27152, 27153, 27154, 27155, 30019, 30020, 33019, 33319, 33320, 178715-1119, 178715-1219, 178715-2219, 178715-6119, 178715-6219, 181363-13, 181363-23, 181363-63, 197983-1119, 22905, 22906, 23575, 23576	全部
POWERED ACOUSTIMASS® 25 揚聲器系統	10050, 10051, 10174, 10627, 10628, 10629, 10630, 10676, 10677, 11114, 11115, 17450, 17451, 17452, 17453, 17456, 17457, 17458, 17459, 17460, 17461, 18955, 18956, 18957, 18958, 18959, 18960, 18963, 18964, 22940, 24273, 8782, 8783, 8784, 8786, 8960, 9249, 9250, 9251, 9253, 18408, 18409, 18410, 18411, 18418, 18419, 187694-131C, 187694-231C, 187694-631C, 187696-1119, 187696-1219, 187696-	全部

	2119, 187696-6119, 187696-6219, 191170-131C, 191170-231C, 191170-631C, 197284-001, 21423, 21424, 251714-001, 252184-001, 252184-006, 253284-006, 253859-001, 253859-002, 253859-006	
POWERED ACOUSTIMASS® 25 系列 II 揚聲器系統	196564-1119K, 196564-1129, 196564-1129F, 196564-1129K, 196564-1219K, 196564-1229, 196564-1229F, 196564-1229K, 196564-6119F, 196564-6119K, 196564-6129, 196564-6129K, 196564-6219F, 196564-6219K, 196564-6229, 196564-6229F, 196564-6229K, 22534, 22535, 22536, 22537, 22538, 22539, 22540, 22541, 22542, 22543, 22544, 22545, 22546, 22547, 22548, 22549, 22550, 22551, 22552, 22553, 22554, 22555, 22556, 22557, 24330, 24331, 24332, 24333, 25025, 25026, 25027, 25028, 25029, 25030, 25031, 25032, 25033, 25034, 25035, 25036, 25037, 25038, 25039, 25040, 25223, 25224, 25225, 25226, 25227, 25228, 25229, 25230, 26076, 26077, 26079, 27136, 27137, 27138, 27139, 27144, 27145, 27146, 27147, 31363, 33193, 196564-1119, 196564-1219, 196564-1219F, 196564-6119, 196564-6219, 23913, 23914, 23915, 23916, 23917, 23918, 23919, 23920, 24763, 263064	全部
POWERED ACOUSTIMASS® 30 揚聲器系統	193141-1119, 193141-1219, 193141-6219, 20453, 20454, 20456, 20457, 20544, 20545, 20546, 20547, 20964, 20965, 21213, 21214, 21215, 21216, 21217, 21218, 21219, 21220, 21221, 21222, 21223, 21224, 21239, 21240, 21241, 21242, 21351, 21352, 23189, 23413, 23414, 23415, 23416, 23431, 23432, 23433, 23434	全部
POWERED ACOUSTIMASS® 30 系列 II 揚聲器系統	22558, 22559, 22560, 22561, 22562, 22563, 22564, 22565, 22566, 22567, 22568, 22569, 22737, 22738, 22739, 22740, 22741, 22742, 22743, 22744, 22745, 22746, 22747, 22748, 24328, 24329, 24336, 24337, 250128- 1119K, 250128-1219K, 250128- 6119K, 250128-6219K, 25041, 25042, 25043, 25045, 25046, 25047, 25048, 25231, 25232, 25233, 25234, 25237, 25238, 26080, 26081, 26755, 26756, 26895, 26896, 26897, 26898, 26899, 26900, 26901, 26902, 27148, 27149, 27150, 27151, 27156, 27157, 27159, 23921, 23922, 23923, 23924, 23925, 23926, 23927, 23928, 24749, 24750, 24756, 250128-6119, 250128-6219, 25728, 263061, 193134-131C, 193134-2313, 193134-231C, 193134-631C, 20542, 20543, 21532, 21533	全部

POWERED ACOUSTIMASS® 800 揚聲器系統	25273, 25274, 25276, 25278, 28115, 29223, 255219-1209, 263063, 27095	全部
POWERED ACOUSTIMASS® 900 揚聲器系統	22137, 24164, 24506, 197743-1219, 22253	全部